



Ref No	Part No	Description
1	616BN-01	Screw
2	616BN-02	Retainer
3	616BN-03	Blade 57mm
4	616BN-04	Packing
5	616BN-05	Spindle Drive
6	616BN-06	Nut Clamp
7	616BN-07	Seal Oil
8	616BN-08	Ball Bearing
9	616BN-09	Head
10	616BN-10	Ball Bearing
10A	616BN-10A	Ball Bearing
11	616BN-11	O-Ring
12	616BN-12	Plug
13	616BN-13	O-Ring
14	616BN-14	Screw
15	616BN-15	Fork Drive
16	616BN-16	Shaft Crank
17	616BN-17	Coupling Nut
18	616BN-18	Internal Gear
19	616BN-19	Ball Bearing
20	616BN-20	Front End Plate
21	616BN-21	Spring Pin
22	616BN-22	Spring Pin

Ref No	Part No	Description
23	616BN-23	Washer
24	616BN-24	Rotor
25	616BN-25	Rotor Blade (4)
26	616BN-26	Cylinder
27	616BN-27	Rear End Plate
28	616BN-28	Ball Bearing
29	616BN-29	Motor Housing
30	616BN-30	Spring Pin
31	616BN-31	Safety Lever Assembly
32	616BN-32	Valve Shaft
33	616BN-33	O-Ring
34	616BN-34	Throttle Valve
35	616BN-35	Valve Spring
36	616BN-36	O-Ring
37	616BN-37	Valve Screw
38	616BN-38	Spring Pin
39	616BN-39	O-Ring
40	616BN-40	Exhaust Sleeve
41	616BN-41	Inlet Bushing
42	616BN-42	"O" Rubber Band
43	616BN-43	Housing Cover
44	616BN-44	Key